

PRP Item List

Part No.	Description	Qty
505010	Barrel	1
508008	Feed Neck	1
508009	Feed Clamp	1
935026	Safety	1
935074	Safety Spring	1
935075	Sear Spring/Reg Cup Spring	1
982028	Valve Cup	1
993074	Trigger Spring	2
1304002	Main Body	1
1304003	Grip Frame	1
1304004	Valve Body	1
1304006	10-32 Thumb Screw	1
1304016	Pump	1
1304017	Pump Arm	1
1304018	Pump Latch	1
1304020	Bolt	1
1304021	Bolt Tip	1
1304022	Bolt Adjustment Nut	1
1304023	Hammer Sear	1
1304024	Hammer	1
1304025	Valve Tube	1
1304026	Valve Seat	1
1304031	Tank Adapter Body	1
1304032	Tank Adapter Lever	1
1304033	Tank Adapter Piston	1
1304036	Trigger	1
1304050	Velocity Adjustment Wrench	1
1304071	Main Spring	1
1304073	Valve Spring	1
1304045L	Grip Panel Left	1
1304045R	Grip Panel Right	1
D3/32HCB	3/32 Chrome Ball Bearing	1
D5/32HCB	5/32 Chrome Ball Bearing	1
D63388	Valve Seal	1
H-010	H-010 BN70 O-ring	4
H-017	H-017 BN70 O-ring	2
S1/16x1/4D	1/16 x 1/4 Dowel Pin	1
S10-32x1/2	10-32 X 1/2 S.H.C.S.	1
S10-32x3/4	10-32 x 3/4 S.H.C.S.	1
S3/16x1/2D	3/16 x 1/2 Dowel Pin	1
S3-32x3/4D	3/32 x 1/2 Dowel Pin	2
S6-32X3/8	6-32 x 3/8 S.H.C.S.	2
S6-32x3/8P	6/32 x 3/8 Pan Head Phillips Machine Screw	4
S8-32x3/8S	8-32 x 3/8 Set Screw	1